














# BURLEY®

*Since 1978*

## 2008-Present Replacement Parts

### Nomad

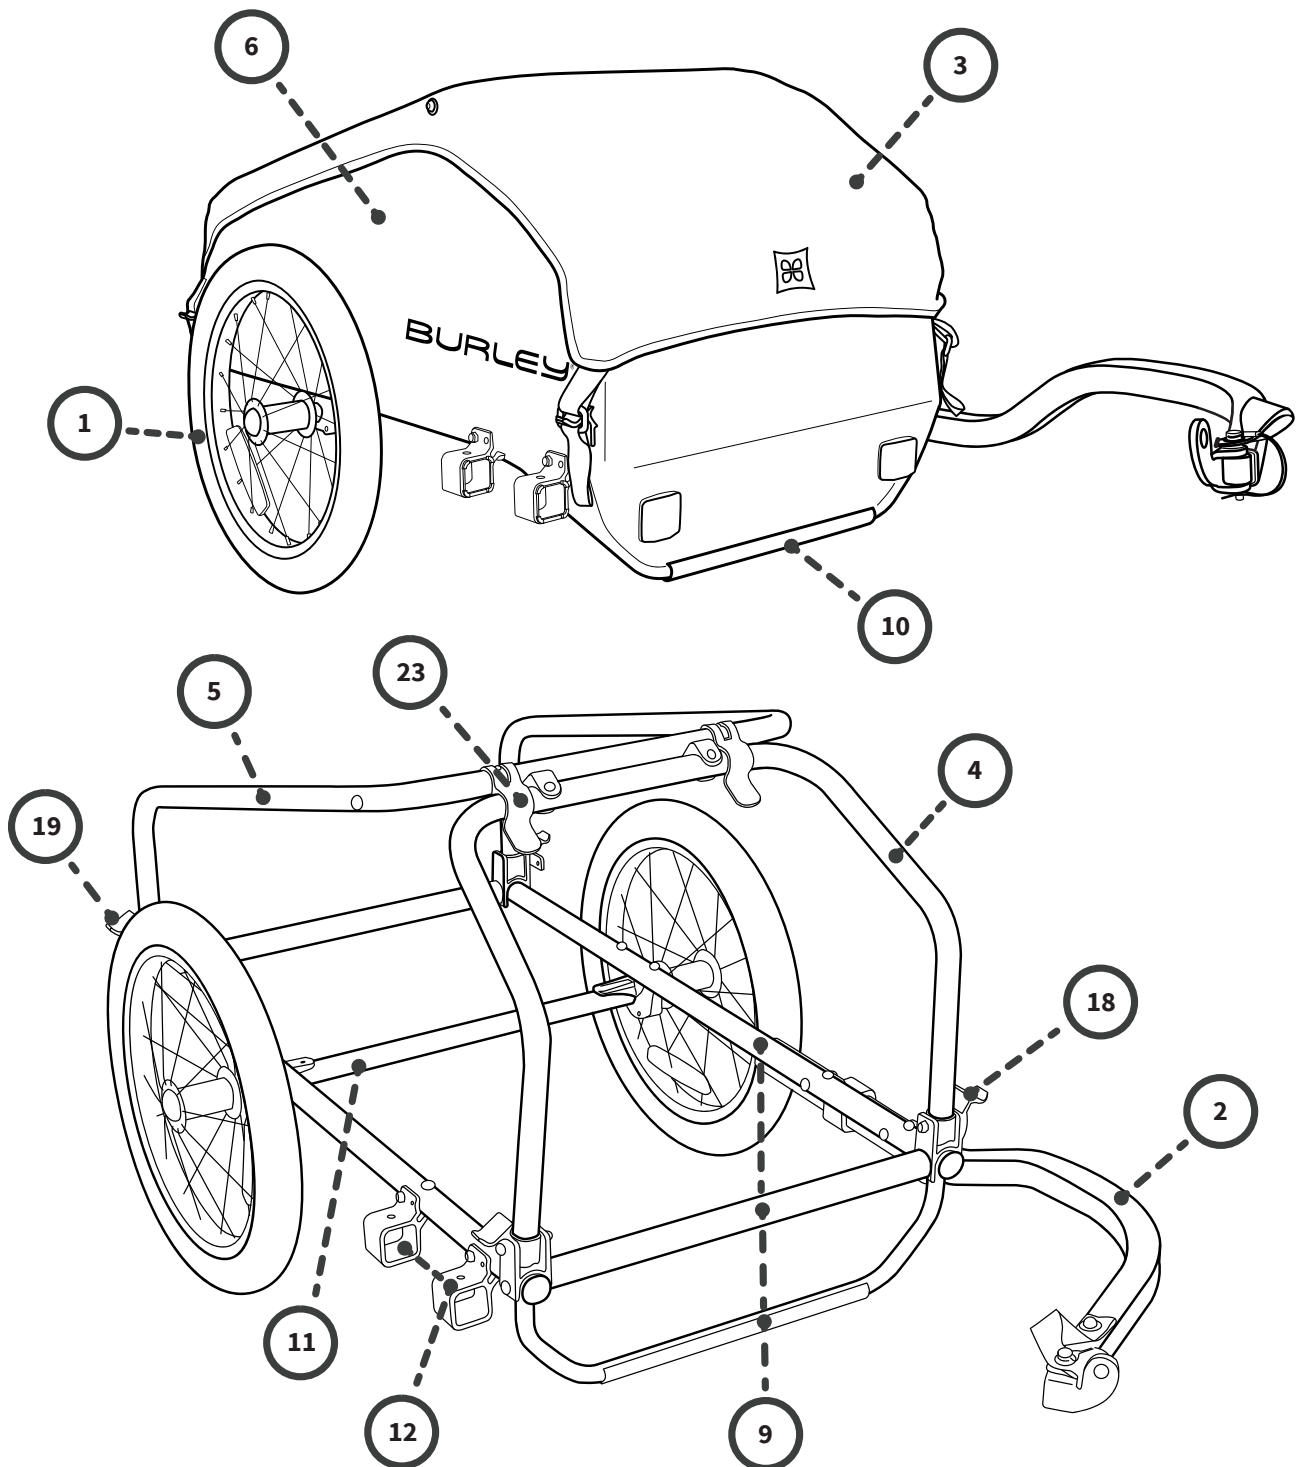

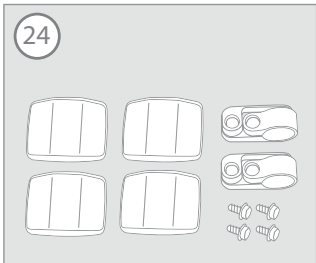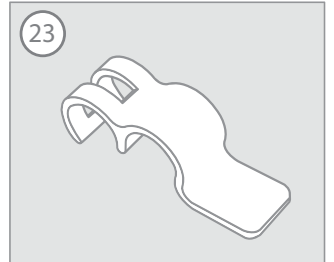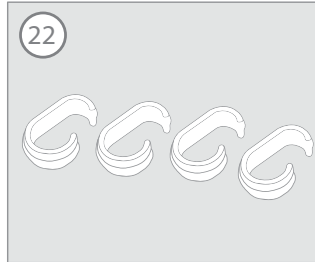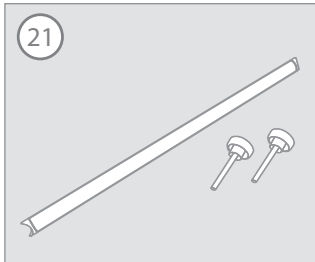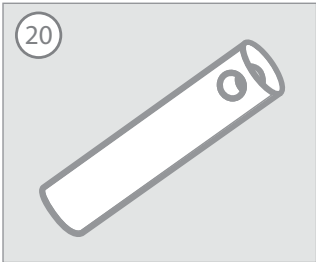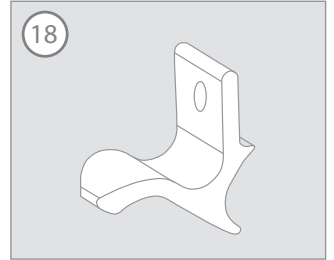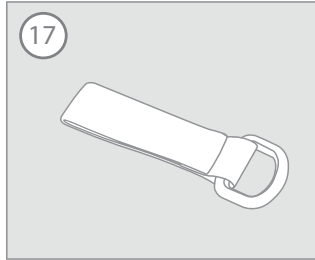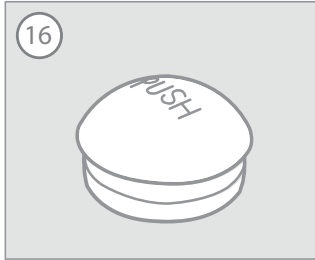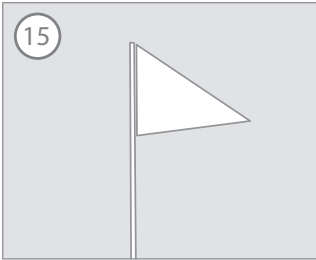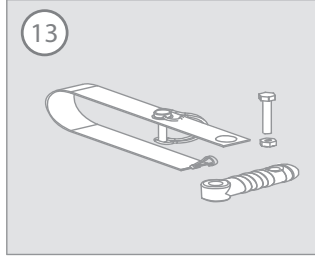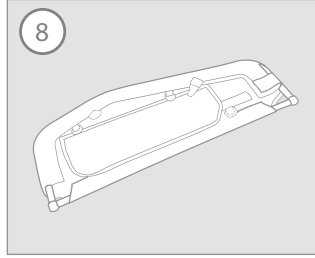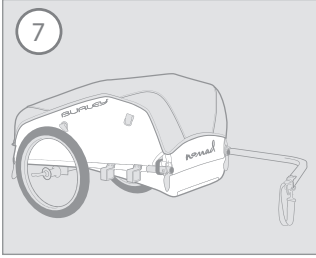

## 2008-Present Replacement Parts: Nomad

Number	Description	Part Number		
		2008	2009-13	2014-
1	16" Wheel Assembly	160015		160050
2	Tow Bar Assembly	250072	250122	
3	Cover	4325401		960110
4	Front Frame	n/a		250366
5	Rear Frame	n/a		250367
6	Floor and Side Panels	n/a		250323
7	Floor	4326502		n/a
8	Right Side Panel w/ Frame	950023		n/a
	Left Side Panel w/ Frame	950022		n/a
9	Main Frame Assembly	950028	950072	250344
10	Skid Guard Kit	n/a		250214
11	Axle Tube Assembly	950029		950203
12	Tow Arm Reciever Kit	950025	950019	
13	Flex Connector w/ Hitch Safety Strap	950037	950038	
14	Steel Hitch, 12.2mm	960116		
15	Safety Flag	960009		
16	Dust Cap for Push Button Wheels	n/a		950123
17	Cover Pull Tab	n/a		240421
18	Front Cover Hook	n/a		120119
19	Right Rear Cover Hook	n/a		120214
	Left Rear Cover Hook	n/a		120200
20	Side Rail Posts	950026		n/a
21	Roll Bar with Knobs	4310007		n/a
22	Snap Coupling Kit	950027		n/a
23	Frame Latch (Single)	n/a		250176
	Frame Latch (Pair)	n/a		950193
24	Reflector Brackets	950118		